

# Long Distance Measuring

## Just Point, Mark & Measure

### STEP 1 - POINT

Position, align and aim the BocceStik Measuring Scale down toward the side-center of the bocce ball being measured

### STEP 2 - MARK

Remove the Long Distance Measuring Pointer from the Base of the BocceStik and establish your repositioning mark with the pointed-side down on the ground just in front of the end-side-corner of the Measuring Scale

### STEP 3 - MEASURE


While holding your mark with the Long Distance Measuring Pointer, reposition the BocceStik toward your mark aligning the mark to the side-center guideline on the Base while positioning the Measuring Scale along side-center of the bocce ball being measured. Once positioned, take your measurement reading.

## bocce stik Measuring Guide


For additional information and details about using and measuring with your BocceStik, go to [boccestik.com](http://boccestik.com) and download the **BocceStik Measuring Guide**.

## Caring for your bocce stik

- When not in use always keep BocceStik folded in its storing position and secured.
- When handling the Measurement Scale, never twist it while unfolding or folding the BocceStik.
- Keep the Pointer in its stored position when not in use.
- Never use BocceStik as a cane for leaning.
- Never use BocceStik as a cane or walking.
- Keep out of inclement weather.

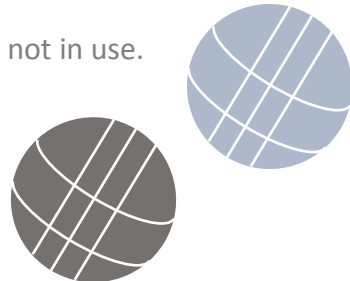

# Quick Start to Using bocce stik

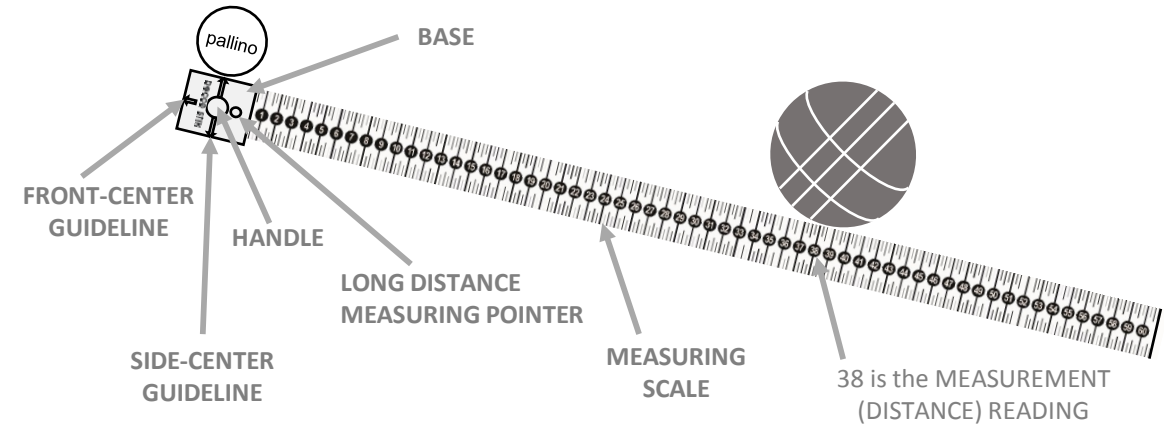

## How to Measure

### Just Position, Align & Measure

**Position** - Unfold the BocceStik. While standing and holding the handle, using the guidelines on its base, position it (left or right) side-center of the pallino while aiming the Measuring Scale of the BocceStik toward the same side of the bocce ball being measured.



**Align** - While holding the handle, tilt the BocceStik back which will elevate the Measuring Scale off the ground, then align & set the Measuring Scale down along side-center of the bocce ball being measured.

**Measure** - Holding the BocceStik in position and aligned, stand over & look down at the side-center of the bocce ball against the Measuring Scale and take a side-center measurement reading from the scale to determine the distance.

# Four bocce stik Measuring Techniques



## 1. STANDARD Measuring

SIDE-CENTER to SIDE-CENTER

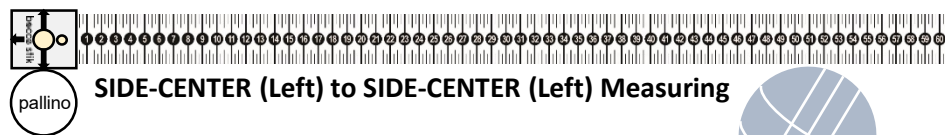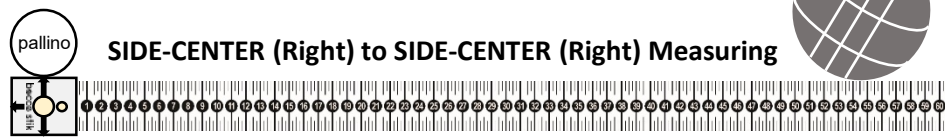



## 3. FRONT-CENTER Measuring

FRONT-CENTER to SIDE-CENTER

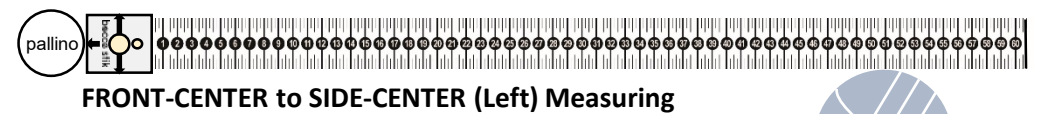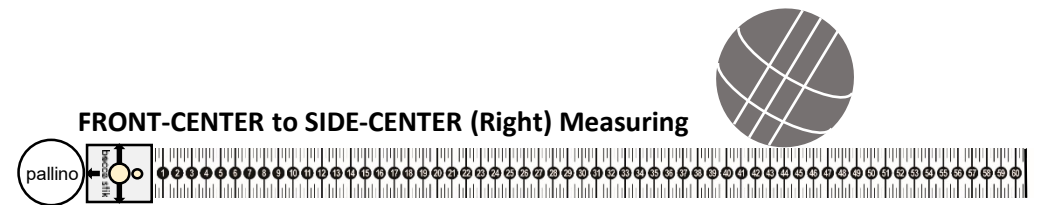



## 2. REVERSE Measuring

SIDE-CENTER to SIDE-CENTER

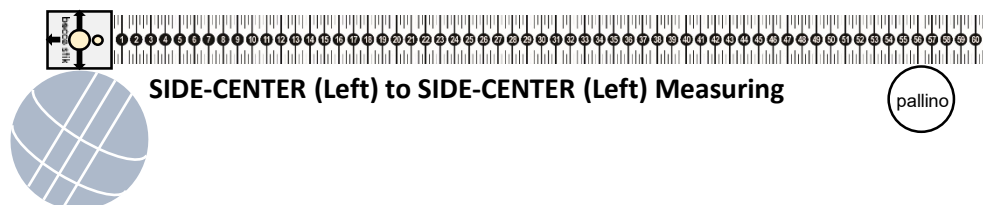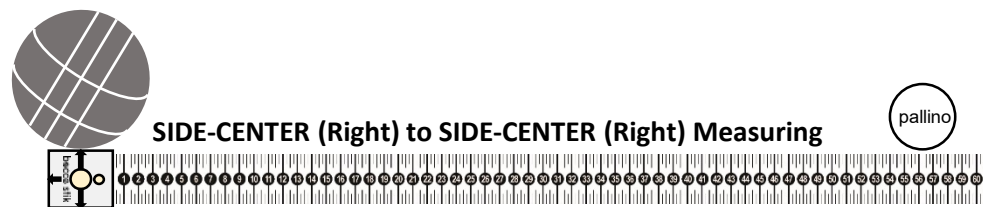

## 4. REVERSE Measuring

FRONT-CENTER to SIDE-CENTER

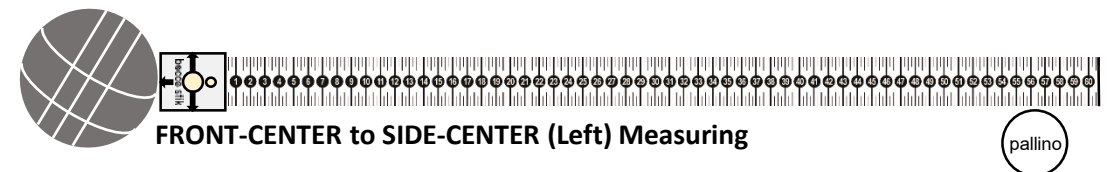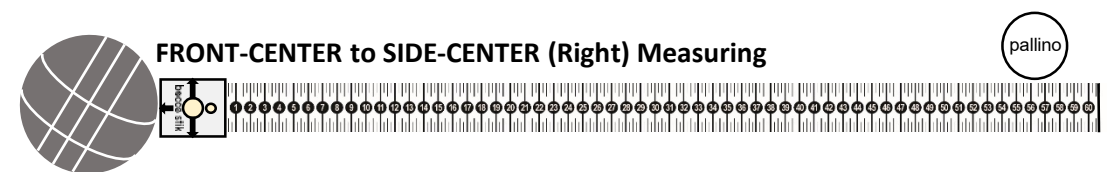

For additional information about using and measuring with your BocceStik, go to [boccestik.com](http://boccestik.com) and download the **BocceStik Measuring Guide**.